


No wire. (because we pulled it out, remember?)

Verifying the Location of an Intermittent Open.

Cut out a 2" section at the suspected break. Strip back 1/8" or so, and pull the wire out of the jacket. If you get what you see in these two pics, you found it.

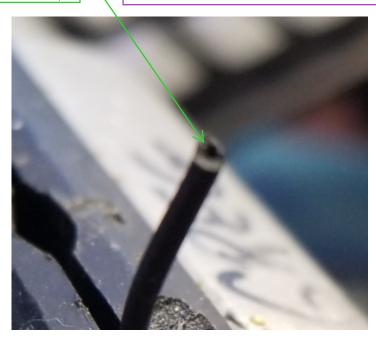

You can see the wire here.

First One End.

Then the Other.

